

1


Note: Ensure proper gloves, goggles, and face mask are on prior to operating equipment.

2



Place Viscosity Testing Tool on top of cup.

3

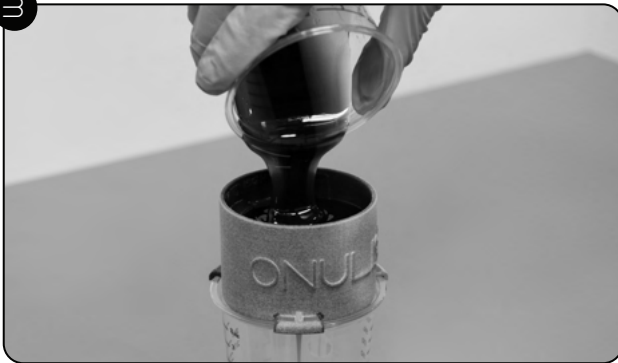

Pour resin sample into Tool, filling to slightly above start ledge, approximately 100ml.

4



As soon as resin reaches the first ledge, start one minute timer.

5

When timer is done check to see the lowest visible ledge:

A



If "HIGH" is showing use "High Viscosity Vat."

B



If "MEDIUM" is showing use "Medium Viscosity Vat."

C



If Tool is empty use "Low Viscosity Vat."

For any questions about your purchase, please reach out to the following:

General Inquiries: info@onulis.com

Support Request: maintenance@onulis.com

Purchases: orders@onulis.com

Digital copies of the User Guide can be found at: www.onulis.com/user-guides